



Assembly Instruction For Base Plate

Exchange Disposable Valve

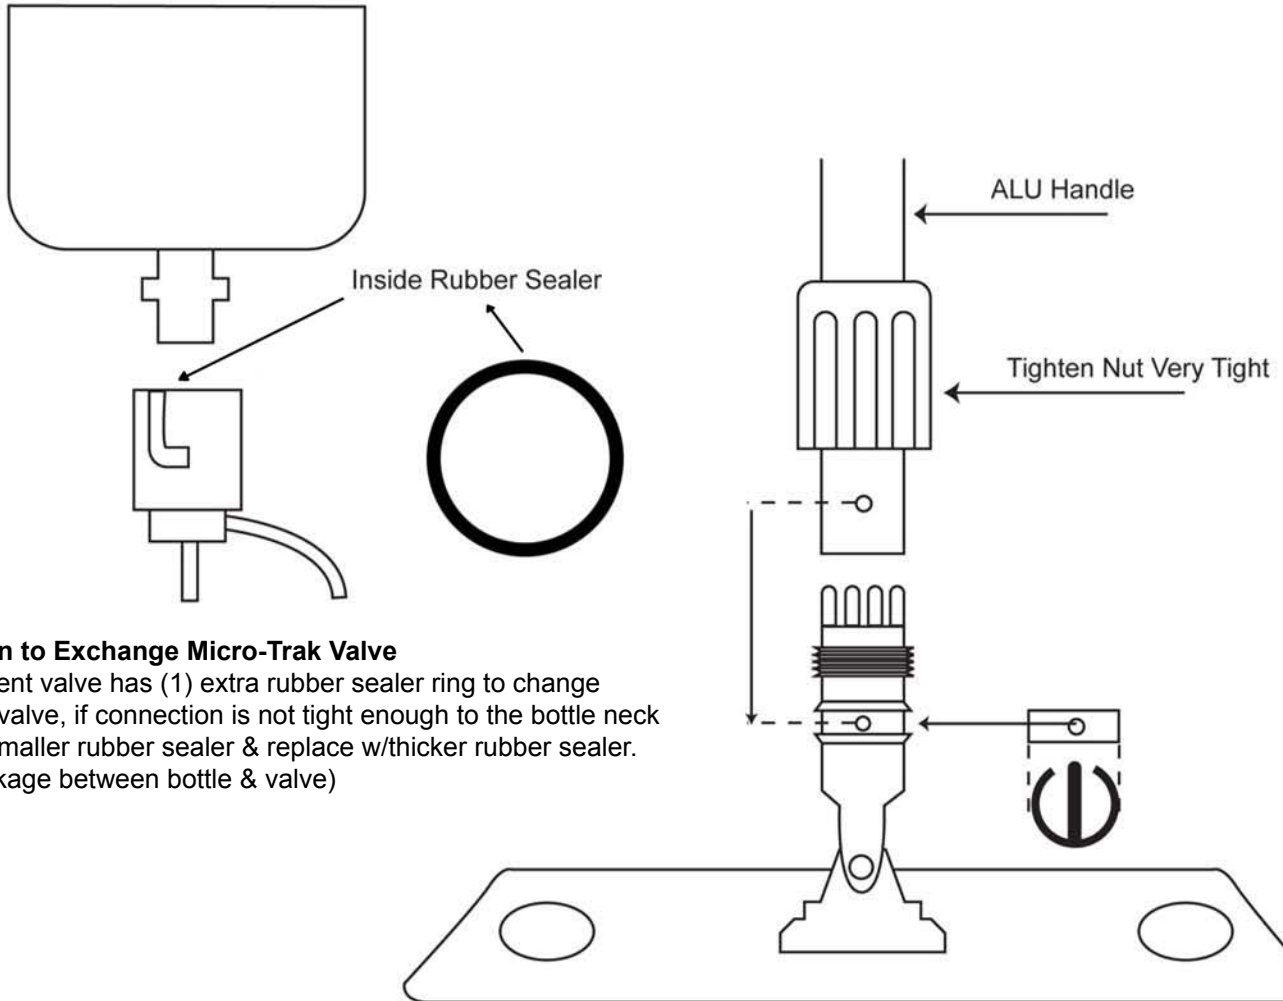

Instruction to Exchange Micro-Trak Valve

Replacement valve has (1) extra rubber sealer ring to change inside the valve, if connection is not tight enough to the bottle neck. Take out smaller rubber sealer & replace w/thicker rubber sealer. (Avoid leakage between bottle & valve)

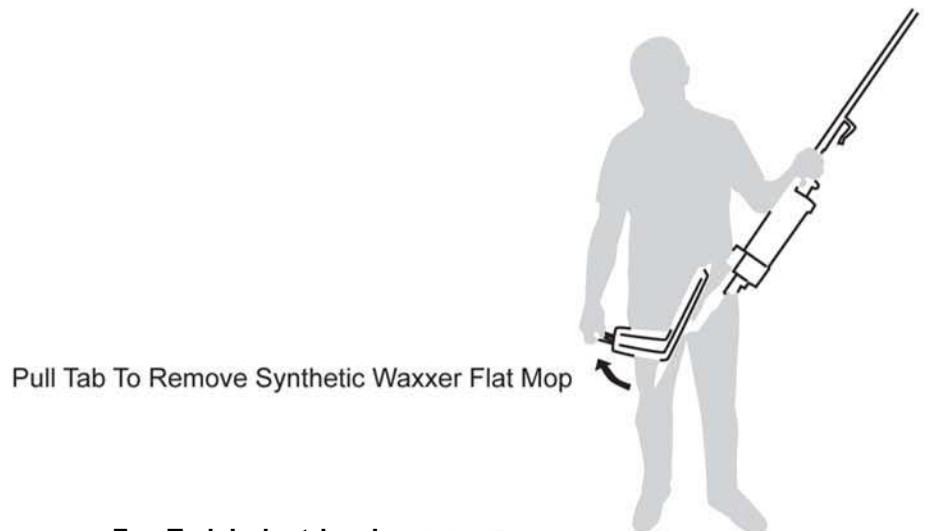

Pull Tab To Remove Synthetic Waxer Flat Mop