



Maintenance Instruction

Rinse Tank & Valve With Water Or Dispose Valve & Tank

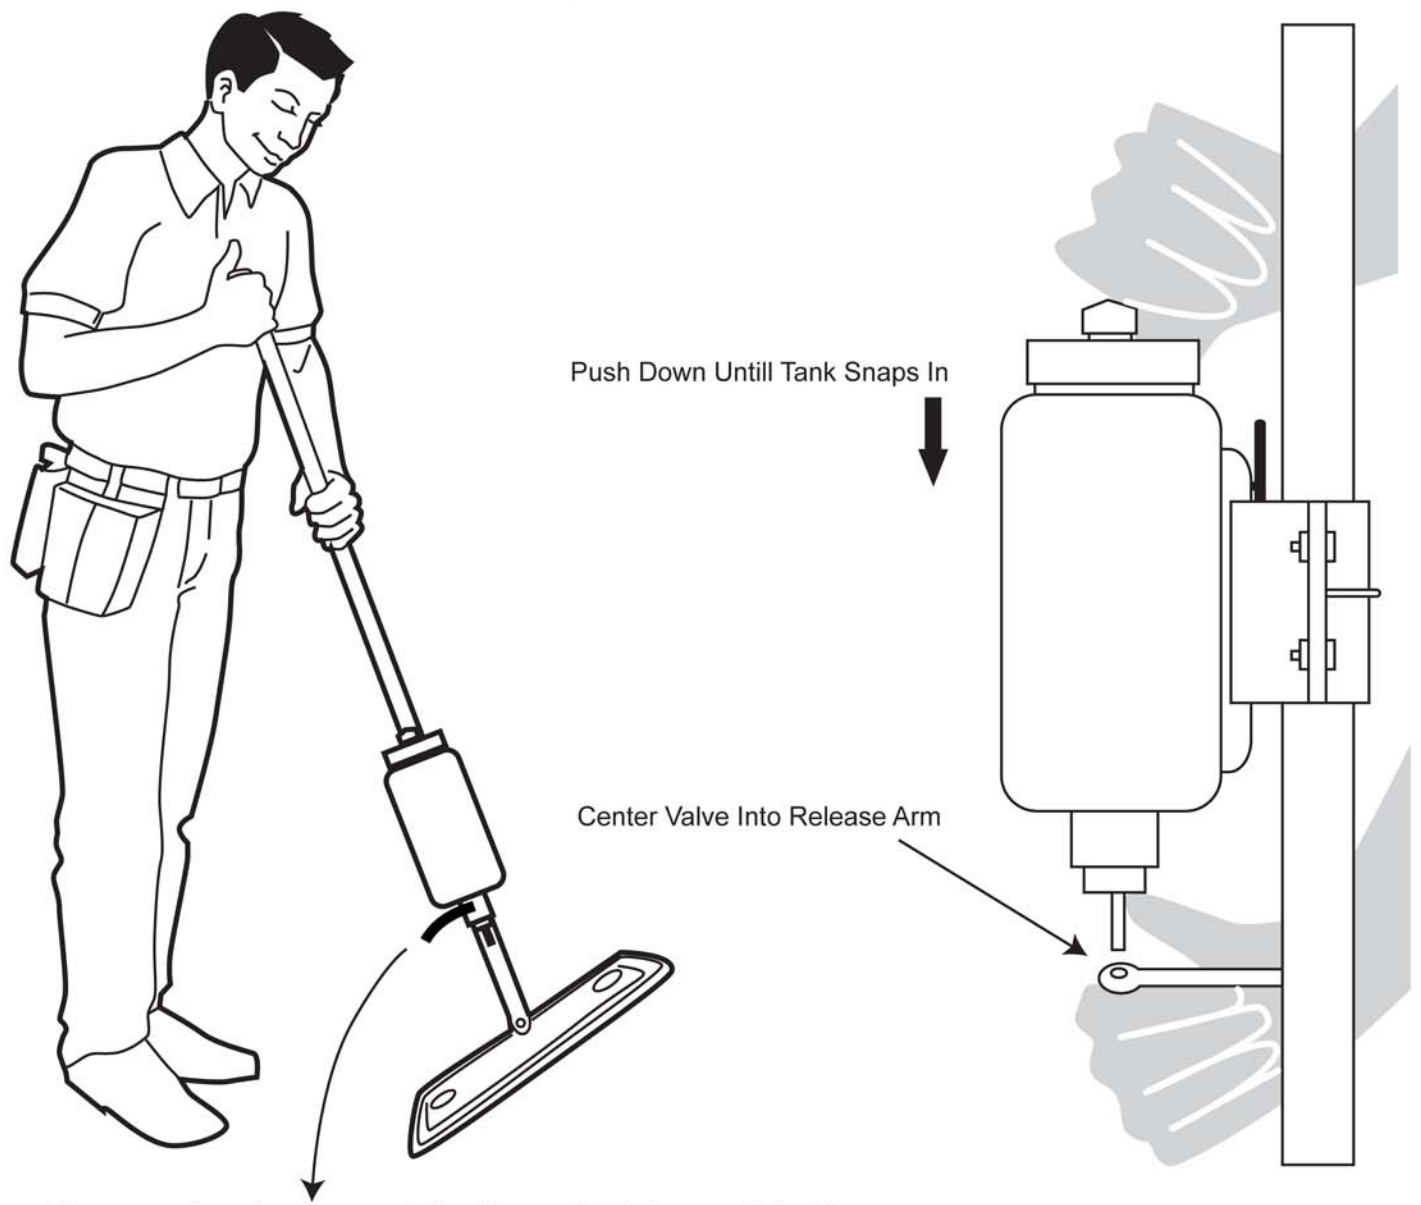

When you stop releasing wax to the floor, wait 2 to 3 seconds to allow the remaining wax in valve to flow out then just mop over.

To Release Solution Please Pull Up Air Valve

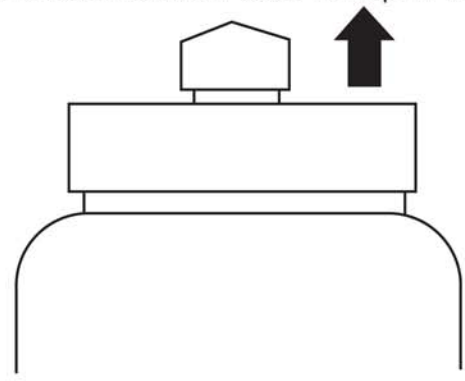

Press Down To Release Solution

